



Connecting range

The connecting range is the maximum misalignment which allows a trouble-free connection with the counter PCB (blind mate, including maximum swiveling angle of adaptor).

Radial and axial working range

The radial and axial working range is the maximum misalignment that allows a sufficient electrical and mechanical connection.

32_MBX-50-0-1

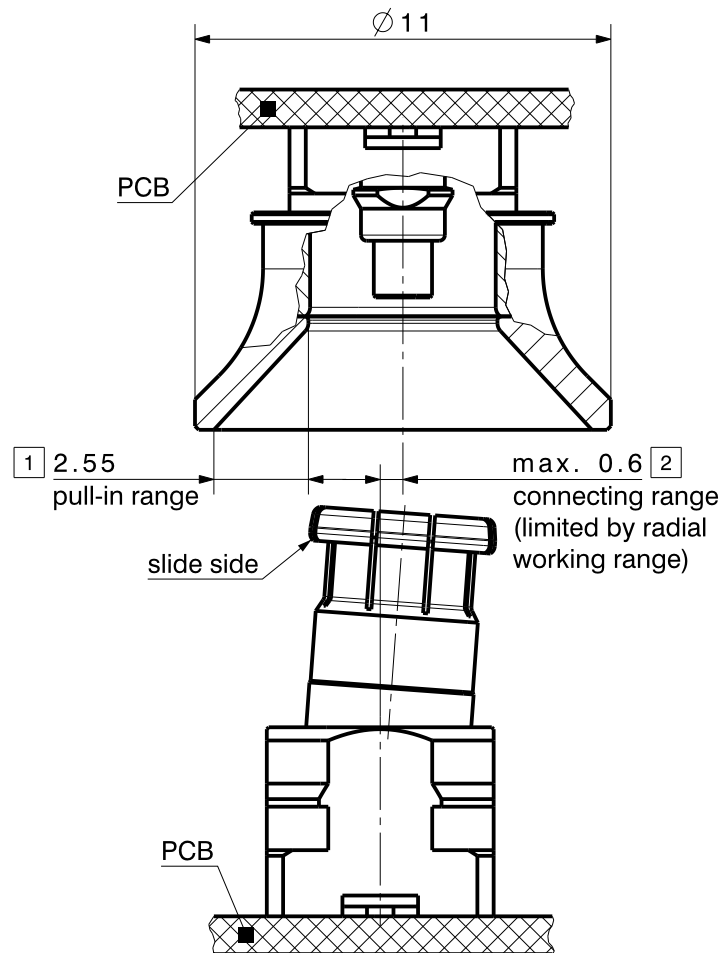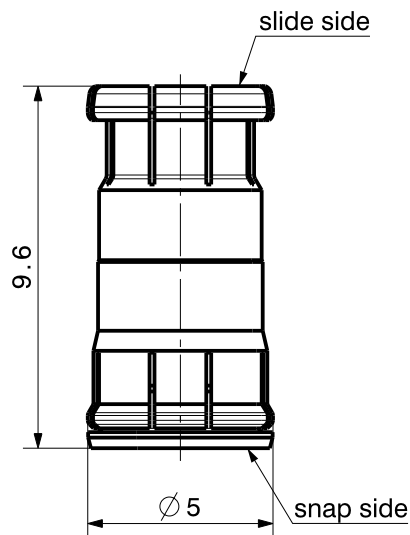

2 if the misalignment between the PCB connectors is bigger than the specified tolerance for the connecting range, a "blind" assembly process of the two PCB's no longer is possible

1 the pull-in range depends on the geometry of the PCB connector (size of lead-in)

